



User Guide

BT PAPERJET 30



Welcome...

to your BT PaperJet 30 plain paper inkjet fax machine.

- Combines phone, fax, copy, and SMS text message functions in one compact machine.
- Send a fax to an individual number or groups of up to 10.
- Delayed sending so you can choose what time a fax is sent.
- Adjustable contrast and resolution for fine detail, drawings and photographs.
- Receive text messages and send texts to compatible phones, mobiles, fax machines and e-mail addresses.
- Automatic redial feature keeps trying engaged numbers three more times.
- 10 one-touch name and number directory and 50 Speed dial name and number directory.
- Redial the last 10 outgoing calls and last 20 incoming calls.



This user guide provides you with all the information you need to get the most from your fax machine.

You must first set up your machine before you can use it. This doesn't take long as it is easy to do. Just follow the simple instructions on the next few pages or see the Quick Start guide enclosed.

■ Need help?

If you have any problems setting up or using your BT PaperJet 30, contact the Helpline on **0870 240 8026**.

Alternatively, you may find the answer on the web at www.bt.com/fax or in 'Help' at the back of this guide.

Got everything?

- BT PaperJet 30 fax
- Handset
- Paper support tray
- Mains power cable
- Telephone line cord
- Quick Start Guide
- User Guide
- Starter black ink cartridge

In this guide

Getting started

Location	6
Setting up	6
Insert paper support tray	7
Insert starter print cartridge	8
Set date and time	9
Fax name and number	10

Getting to know your fax

Control panel	11
Document feeders	12

Using the phone

Making calls	13
Handsfree	13
Redial	13
Secrecy	13
Call timer	13

Using the directories

One touch directory	14
Store	14
Dial	14
Edit and delete	15
Speed dial directory	
Store	15
Dial	16
Edit	16
Delete	16

Faxing

Inserting plain paper	17
Inserting documents	17
Contrast	17
Resolution	18
Sending faxes	18

Automatic redial	18
Delayed sending	18
Resend, change number or cancel a stored fax ...	19
Send fax using redial	20
Receiving faxes	20
Set reception mode	21
Polling	21
Polling reception	21
Change/cancel a timed poll	21

Reports and lists

Reports	23
Report meanings	23
Transmission report	24
Broadcast transmission report	24
Print now	24
Lists	25
Print installation information	25
Set-up and Directory list	25

Caller Display

Calls list	26
View and dial	26
Caller information not available	26

Copying

Copy document	27
---------------------	----

SMS

Register	28
Cost of service	28
Activate	29
Sending texts	29
Save texts	30
Set time limit for stored texts	30
Receiving texts	30

Reading texts 30

Options while reading texts. 31

Set subaddress 31

Audible alert. 32

Delete, edit, forward and print 32

Print list of texts 33

Print text configuration. 34

Additional settings

12 /24 hr format. 35

Change date and time 35

Position of fax header 35

Set language and country 36

Adjust print area for received documents 37

Received fax size. 37

Silent reception 38

Number of rings before answer 38

Ringer volume 39

Distinctive ring 39

Voice call alert 40

Remote start code 40

Document in memory redial 41

Dial and fax tones on/off. 41

Dial and fax tones volume. 42

Beeps on/off. 42

Transmission speed. 42

Error Correction Mode (ECM) 43

Install a new print cartridge

Type. 44

Replace 44

Clean and test nozzles 46

Clean electrical contacts 46

Help. 49

Error codes 51

Signals and on-screen messages 52

Paper jams 54

General information

Safety. 56

General 56

Cleaning 56

Guarantee 59

For your records 60

Technical information

Switchboard compatibility. 61

R&TTE 62

Sample standard page 63

Getting started

WARNING

Do not place your BT PaperJet 30 in the bathroom or other humid areas.

Location

You need to place your BT PaperJet 30 close enough to mains power and telephone sockets so that the cables will reach.


Always choose a smooth, flat, horizontal surface. Avoid soft surfaces such as carpets.


As documents come out at the front, make sure there are no obstructions in front of the machine.


Setting up

1. Connecting up

Plug the telephone line cord into the line socket at the rear of your BT PaperJet 30 and plug the other end into the telephone wall socket.

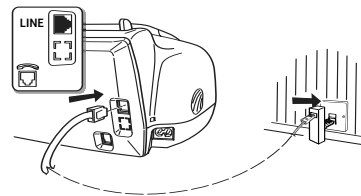

Connect the telephone handset curly cable into the handset socket  at the back of your machine. Place the handset in the cradle.

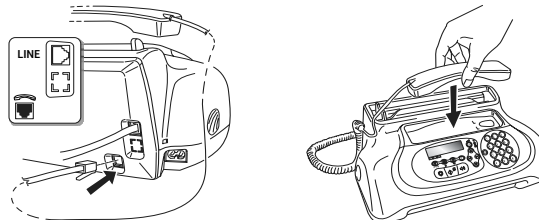


Which socket?

Telephone line socket: **LINE**


Handset socket: 

Plug the mains power cable into the machine, and the other end into the mains power and switch on.

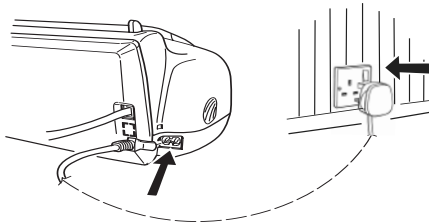

Your BT PaperJet 30 performs a start up check. The screen displays **AUTOMATIC** on the top line and alternates between **SET DATE/TIME** and **CHECK PRINT HEAD** on the bottom line.

2. Insert paper support tray into the slots.

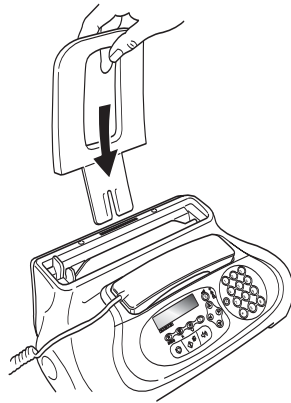

IMPORTANT TEST PRINT

Once the print cartridge has been installed and the front cover closed, your BT PaperJet 30 will automatically clean the cartridge nozzles and perform a test print.

Make sure a sheet of paper is loaded in the plain paper feeder. The test page will be printed and the display shows CHECK PRINT OUT. 1 = EXIT 0 = REPEAT.

Examine the test page. Check that the numbered scale is not broken at any point and that there are no horizontal white lines within the black areas.


If everything seems OK, press **1**. If there is a problem, press **0** to repeat the process.

If the test print is still not satisfactory, see 'Clean print cartridge electrical contacts' and 'Clean print cartridge nozzles', page 46.


The starter print cartridge allows you to print up to 80 standard pages. Normal print cartridges have a greater capacity and can print up to 450 standard pages. See page 63 for a sample 'standard page'.

3. Insert paper into the paper tray.


Your BT PaperJet 30 can hold up to 40 sheets of 80g/m2 paper. To prevent several sheets being drawn into the machine together, fan out the paper first, then tap it down on a flat surface before inserting it into the paper tray.

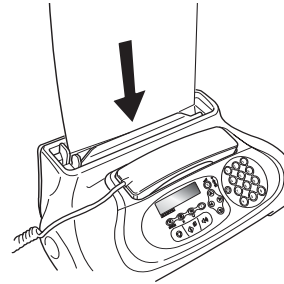**4. Insert the starter print cartridge.**


Remove handset and open the front cover.

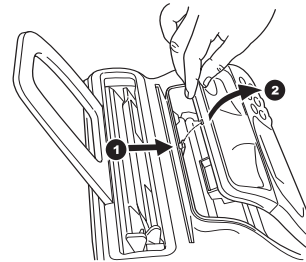


Peel protective film off cartridge, being careful not to touch the nozzles or electrical contacts.

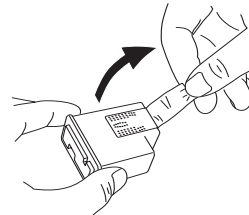

Insert the cartridge into the holder with the metal contacts facing the front of the machine.

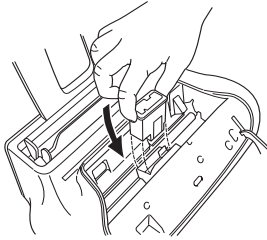

Pull the cartridge forward until it clicks into place.

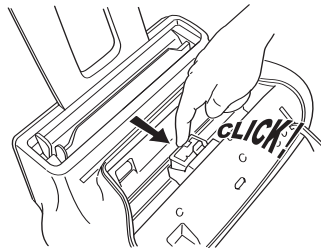

Close the front cover and replace the handset.

4. Set date and time

You will need to set the date and time when you first switch on your machine and whenever there is a power failure.

1. Press **F**, display shows DATE AND TIME.
2. Press **◀▶** to display FORMAT: DD/MM/YY. To select a different format press **◀** or **▶** to scroll through the options.
3. Press **◀▶**. Display shows 24H. To switch to the 12 hour format, press **◀** or **▶**.
4. Press **◀▶**. Display shows DD/MM/YY HH:MM.



If you make a mistake, press **◀** or **▶** to move the cursor to the digit you want and enter the new one to overwrite it.

If you selected the 12 hour format, the time display will show **a** to indicate am and **p** for pm.


Once set, the date and time can be changed, see *Change Date and Time*, page 35.


Writing tips

To enter a space, press  to move the cursor.

To enter a special character, e.g. &, press  and  to scroll through the options. For a full guide to available symbols and characters, *see character map, page 29*.











If you make a mistake, move the cursor to the character you want and overwrite it with a new one.



To delete the whole name, press .

If you want to include the international code in your number press  instead of the zeros, The display will show +.

Connecting to a switchboard?

To set your switchboard/PBX connection, *see page 61*.








5. Use the keypad to enter the correct date and time, e.g.           for 11 January 05, 9.30am. As each digit is entered, the cursor moves to the next space.

6. Press  to confirm then  to return to standby.

5. Enter fax name and number

These will be printed on the top of each page received at the machine you send a fax to.

The name can be up to 16 characters long and the number up to 20 digits.

1. Press  until the display shows INSTALLATION, then press .
2. Display shows TEL LINE SET UP. Press  until the display shows TYPE YOUR NAME.
3. Use the keypad to enter your name then press . Display shows PHONE NUMBER.
4. Press  then enter your fax machine's phone number. Press  to confirm.
5. Press  to return to standby.

Your BT PaperJet 30 is now ready for use.

Getting to know your fax

Fax machine

Speed dial directory

Press to access Speed Dial and One Touch Directory numbers. Also use to delete during editing.

Calls lists//Pause

Displays the last 10 outgoing fax and phone calls, *page 20*.
Displays the last 20 incoming fax and phone calls, *page 26*.
Inserts a pause when dialling or storing a number, *page 15*.

F (Function)

Press to open the main menu.
Press to select further menu options displayed on screen.

(S)

Adjusts the speaker volume when the speaker is active. To access SMS (Text)

Error light

Indicates a fault when sending or receiving a fax.

Message indicator

Flashes when you have documents or text messages ready to print.

Resolution/Hold

When a document is inserted in the feeder tray, press to adjust the faxing/copying resolution. *page 18*.

During a telephone conversation, press to put the line on hold, *page 13*.

Stop

Cancels a fax, copy and SMS text operation.

Turns off the Error indicator light.
Returns your machine to standby.

Start

Press to begin sending or receiving a document.

Confirms menu options on-screen.

Press to start copying a document inserted in the feeder tray.

Handsfree (SPEAKER)

Press to make calls via the built-in loudspeaker, *page 13*.

(UP/DOWN/LEFT/RIGHT)


Scroll through menus and settings.
Move the cursor left and right when entering names and numbers.


R (Recall)

Used to access switchboard functions and with some BT Calling Features.

Keypad

For dialling numbers and entering names and numbers in memory and writing texts. Also, press and hold to dial any one-touch numbers stored, *page 14*.

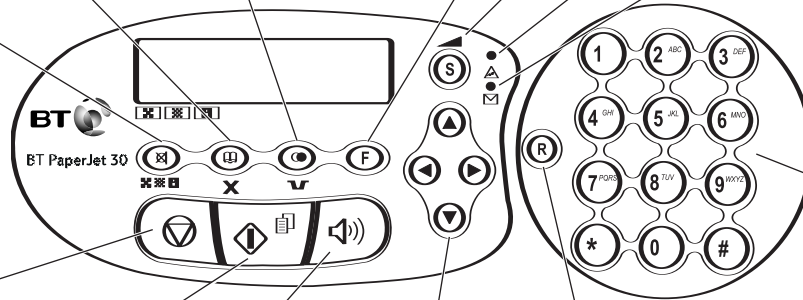

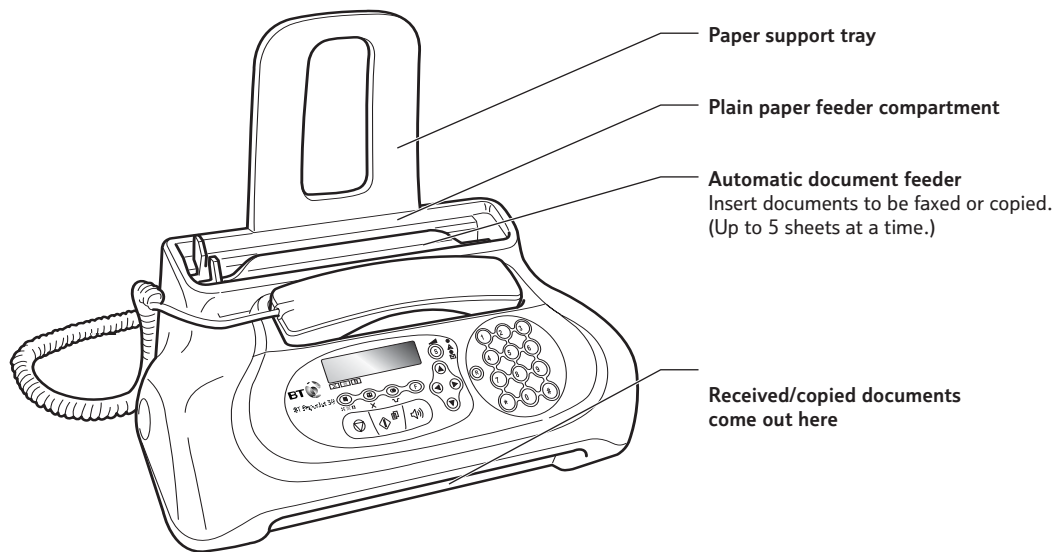



Using the phone

Making calls









1. Lift the handset and enter the number.
2. To end a call, replace the handset.

Handsfree

1. Press . You will hear the dial tone.
2. Dial the number.
3. Press  to end the call.

Redial

Redial one of the last 10 outgoing numbers or one of the last 20 incoming numbers.



1. Lift the handset or press .
2. Press . Display shows OUTCOMING CALLS. If you want INGOING CALLS, press  or .
3. Press  then scroll  or  through the list to display the number you want.
4. Press .

You can transfer a handsfree call to the handset to keep your conversation private. Just lift the handset off the hook.

When using Redial, do not put any document in the automatic document feeder.

Secrecy

You can put a caller on hold while you talk to someone else nearby. While on hold, your caller cannot hear you. You and the caller will hear an assurance tone whilst secrecy is on.


1. During a conversation, press . The display shows LINE ON HOLD, PRESS HOLD.
2. Press  again to resume your conversation.

Call timer

During a phone call, the duration of the call is shown in the display.

Using the directories


If you make a mistake, move the cursor to the character you want and overwrite it with a new one.

To delete the whole name, press .

Print a directory list











You can print a list of the one-touch and speed dial directories. *See printing reports and lists, page 25.*

One-touch directory

You can store a name and number entry under each  button on the keypad.


Numbers can be up to 64 digits long, names up to 16 characters.

Store an entry


1. Press  repeatedly until the display shows FAX SET-UP then press .
2. Press  repeatedly until the display shows ONE TOUCH DIAL then press . Display shows TYPE ONE TOUCH KEY 0-9.
3. Press the button  you want to use to store the entry.
4. Enter the telephone/fax number you want and press .
5. The display shows NAME. Use the keypad to enter the name you want and press  to confirm.
6. Display shows EDIT ANOTHER YES. Press  to select another  one-touch button or  to return to standby.







To change a one touch entry, simply overwrite the existing entry with a new one.

Dial

1. Press *and hold* the  button you want until the number is displayed and dialled.
2. Lift handset when instructed.

Edit and delete





One touch entries are deleted by accessing ONE TOUCH in the FAX SET UP menu and deleting the entry using the  button. To edit, delete then add new entry.

1. Press *and hold* the  one touch button until the stored telephone number is displayed.
2. Press  then . The name is displayed.
3. Press  then .
4. Press  to return to standby.


If you make a mistake, move the cursor to the character you want and overwrite it with a new one.

To delete the whole name, press .












Speed dial directory

You can store 50 name and number entries in the speed dial directory. Dial each entry using a two-digit code  - .

Numbers can be up to 64 digits long, names up to 16 characters.






If you need to enter a pause into the number you are storing press .

Store an entry


1. Press  *repeatedly* until the display shows FAX SET-UP then press .
2. Press  *repeatedly* until the display shows CODED SPEED DIAL then press . Display shows TYPE SPEED NO. (01-50).
3. Enter the two digit code you want, e.g.   and press .
4. Enter the telephone/fax number you want and press .
5. The display shows NAME. Use the keypad to enter the name you want and press  to confirm.
6. Display shows EDIT ANOTHER YES. Press  to select another speed dial code or  to return to standby.






To change a speed dial entry, simply overwrite the existing entry with a new one.

Dial





1. Press  to display ADDRESS BOOK CODE OR < >.
2. Enter the speed dial code, e.g.   to display and dial the entry or press  or  to scroll to the entry you want.
3. Lift handset when prompted.

Edit and delete speed dial entries

One touch entries are deleted by accessing CODED SPEED DIAL in the FAX SET UP menu and deleting the entry using the  button. To edit, delete then add new entry.

1. Enter the two digit number of the entry that you wish to change.
2. Press  then . The name is displayed.
3. Press  then .
4. Press  to return to standby.

View one touch and speed dial entries

1. Press  then press  or  to scroll through the entries.
2. Press  to dial a displayed number.


Faxing

Inserting plain paper

To avoid pages being drawn in together, always fan out the pages first to separate them, then tap down before placing them in the paper feeder.

Inserting documents for sending

Place up to 5 sheets into the automatic document feeder, making sure the side to be sent is facing away from you.

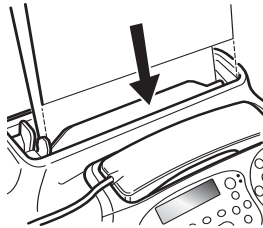

When the document has been inserted properly, the display shows **DOCUMENT READY** and the bottom line shows the contrast setting **NORMAL**.

Contrast

You can adjust the brightness for sending or copying light or dark documents.

NORMAL should be suitable for most documents.

Select **DARK** when sending light originals and **LIGHT** when sending dark originals.

1. Press **F** repeatedly until the display shows **FAX SET UP** then press **⏏**.
2. Press **F** to display **VARIOUS SETTINGS** then press **⏏** until **CONTRAST:NORMAL** is displayed.
3. Press **⏏** or **⏏** to switch between **NORMAL**, **DARK** and **LIGHT**.
4. Press **⏏** to confirm and then **⏏** to return standby.

The plain paper feeder holds up to 40 sheets of 70-110g/m² paper


The document feeder holds up to 5 sheets of 70 – 110g/m² paper.

If the document does not feed properly into your BT PaperJet 30, press **⏏** to eject the page.




IMPORTANT



Do not insert into the document feeder:



- Pages smaller than A5.
- Newspaper pages (because of printer's ink).
- Pages with staples or paperclips, sticky tape or glue.
- Creased or torn pages.
- Wet paper or paper with wet correction fluid.
- Glossy or laminated paper.
- Paper thicker than 110g/m² or thinner than 70g/m².

If you make a mistake dialling, press (<>) to move the cursor to the digit and overwrite it with the correct one. Or press  to delete the whole number.


Resolution

Resolution is identified by an arrow in the bottom left hand corner of the display when there is a document in the document feeder. The arrow normally points at the standard resolution  icon. The resolution can be changed to Fine  icon or Photo  icon.

If sending text and drawings with fine detail, press  until the arrow appears above the fine resolution .

If sending photos, press  until arrows appear above the fine and photo resolution icons .

Sending faxes

1. Insert the document to be sent in the automatic document feeder. The display shows DOCUMENT READY.
2. If required, set the contrast and resolution.
3. Dial the number – or use redial or the one touch or speed dial directories – then press .

To cancel the fax during sending, press .

When the fax has been sent, the display shows TX COMPLETED.

Automatic redial

If your BT PaperJet 30 cannot get through to the other machine, it will automatically redial the number up to 3 times.

Delayed sending

You can store a document in your machine's memory and set a time for it to be sent.

1. Insert the document to be sent and set the contrast and resolution if required.

2. Press **F** *repeatedly* until the display shows TX FROM MEMORY then press **⏏**. The document is scanned.
3. When scanning is completed the document is assigned a reference number, e.g. DOC.N.XXXX and the display shows TYPE TIME HH:MM.
4. Enter the time you want the fax to be sent, e.g. **1****8****2****0** for 6.20pm.
5. Press **⏏** to confirm. Display shows TYPE NUMBER NUM/TOUCH/SPEED.
6. Enter the number or use the one-touch or speed dial directories.
7. Press **⏏**.

You can now enter another number to send the same document to another person.

Or

Press **⏏** *again* to confirm. The display shows AUTOMATIC MEMORY TX.

Resend, change number or cancel a stored fax

1. Press **F** *repeatedly* until the display shows TX FROM MEMORY then press **⏏**. Display shows ALREADY ENTERED.
2. Press **⏏** display shows PRINT SETTING?
3. Press **⏏** or **⏏** to switch between the options:
 - PRINT SETTING? – press **⏏** to print a status report of the last fax stored in the memory. After printing, the fax returns to standby.
 - CANCEL SETTING? – press **⏏** to cancel the document and return to standby.
 - CHANGE PARAM? – press **⏏** to change the time the fax will be sent.
4. Press **⏏** to confirm. Display shows TYPE NUMBER.
5. Enter the number or use the one-touch or speed dial directories.

If the power fails, the document stored in the memory will be cancelled.

Low ink warning

When the print cartridge is close to running out, the display shows INK LOW.

When there is no ink left, OUT OF INK is displayed.

See page 44, Replace the print cartridge.

Deteriorating print quality?

If the print quality deteriorates, set your BT PaperJet 30 to clean the print head and nozzles and print a test page, *see page 46*.

Reception in memory

If you place a document to be faxed or copied in the automatic feeder while receiving a document, printing the received document stops and it will be stored in the memory for printing later. During reception the display shows RX IN MEMORY.

6. Press .








You can now enter another number to send the same document to another person.

Or

Press  again to confirm. The display shows AUTOMATIC MEMORY TX.

Send a fax using redial


You can redial any of the last 10 outgoing numbers or 20 incoming numbers.

1. Insert a document in the automatic feeder and adjust the contrast or resolution if required.
2. Press  to display INCOMING CALLS or to view OUTGOING CALLS, press  or . Press .
3. Press  or  to scroll to the number you want.
4. Press  to dial.

Receiving faxes

Faxes are received automatically unless you change the reception mode.






You can set the way your BT PaperJet 30 receives documents.

MANUAL reception – you answer calls by lifting the handset and pressing  if you hear the fax tones.

AUTOMATIC reception – your machine automatically answers each call expecting a fax.

PHONE/FAX – automatic reception with call recognition. Your machine answers each call after the number of rings set. If it is a fax call the document is received. If it is a voice call, you hear a tone and the display shows LIFT HANDSET. If you do not answer within 20 seconds, your machine tries to receive a fax again.

Set reception mode

1. Press **F** to display RECEPTION MODE then press .
2. Press  or  to scroll between the options MANUAL, PHONE/FAX and AUTOMATIC.
3. Press  to select the setting displayed or  to cancel.





Polling

Polling lets you call another fax machine to retrieve a document automatically.

Polling is only available between compatible fax machines. Polling is sometimes called Faxback.


Polling reception

When you know a document is ready to be polled from another machine:

1. Press **F** *repeatedly* until the display shows POLLING RX then press .
2. The display shows TYPE TIME HH:MM. You can leave the current time for polling right away or enter the time you want your machine to collect the document.
3. Press  and enter the number to be dialled.
4. Press  to confirm or  to cancel.








Change/cancel a timed poll.

If you have set your machine to poll a document at a later time, you can cancel it or change the time at which it starts to poll.

1. Press **F** *repeatedly* until the display shows POLLING RX then press .
2. The display shows ALREADY ENTERED.

When a document has been received, the display shows DOC. IN MEMORY and then prompts you to remove the document from the feeder tray. Your machine will then print the received fax.

The BT PaperJet 30 will hold about 20 pages (depending on content) in its memory if the paper has run out.

-
3. Press . Press  or  to switch between:
CANCEL SETTING? – press  to cancel polling.
CHANGE PARAM? – press . The display shows TYPE TIME HH:MM.
Enter the new time you want your machine to collect the document. Now press  and change the number to be dialed if necessary.
 4. Press  to confirm.

Reports and lists

Your BT PaperJet 30 can print out a list of faxes sent and received, speed dial and one-touch entries and other useful information.

Reports

Power failure report – printed automatically after a power failure. If there are documents stored in the memory, the report indicates the number of pages lost.

Activity report – details of the last 42 faxes sent and received. Printed automatically after every 32 actions or on request, *see page 24*.

Last transmission report – information on the last fax sent or received. You can set your machine to print automatically after each action or on request, *see page 24*.

Failed transmission report – printed automatically only when a fax has failed to be sent or received. You can switch automatic printing on or off.

Last broadcast report – information about the last fax sent to a group, *see page 24*.

Act. N	Reference number for the sent or received fax.
Doc.N	Reference number assigned by the machine for a document stored in the memory.
Type	Type of action: TX = fax sent RX = fax received RX POLL = polled fax received
Dialled number	Fax number you dialled.
Name	Name of the person you called. Only displayed if it has been stored with the number in the one-touch or speed dial directories.
Received Id	Number and/or name (if available) of the fax machine that called you.
Date/Time	Date and time the fax was sent/received.
Duration	Time it took to send/receive the fax.
Pages	Total number of pages sent/received.
Result	OK – fax sent/received successfully ERROR CODE XX – if the fax was not sent/received successfully. See Error Codes, page 51 for an explanation of the code number provided.

Transmission Report

Select the printing option you prefer.

1. Press **F** *repeatedly* until the display shows FAX SET-UP then press **⏏**.
2. Press **F** then press **⏏** *repeatedly* until the display shows FAILED TX REPORT.
3. Press **◀** or **▶** to scroll through the options
 FAILED TX REPORT – automatically printed whenever a fax is not sent successfully.
 TX REPORT ALWAYS – report is always printed after each fax sent.
 TX REPORT OFF – no report will be printed.
4. Press **⏏** to confirm the option displayed then **⏏** to return to standby.

Broadcast Transmission Report

Select the printing option you prefer – on or off.

1. Press **F** *repeatedly* until the display shows FAX SET-UP then press **⏏**.
2. Press **F** then press **⏏** *repeatedly* until the display shows BROADCAST.REP.:ON.
3. Press **◀** or **▶** to switch to BROADCAST.REP.:OFF.
4. Press **⏏** to confirm the option displayed then **⏏** to return to standby.


Print now

You can print a Last Transmission, Activity, Last Broadcast and Caller ID list on request.

1. Press **F** *repeatedly* until the display shows PRINT OUT REPORT then press **⏏**.
2. Display shows LAST TX REPORT.

3. Press  or  to scroll through the options:

LAST BROAD. REP, ACTIVITY REP, PRINT: ID LIST, PRINT OUT:EXIT






4. Press  to confirm the option displayed. After printing out your BT PaperJet 30 returns to standby.

Lists








You can print out a list containing the:

- installation and set-up settings
- one-touch directory
- speed dial directory

Print Installation information

1. Press  *repeatedly* until the display shows INSTALLATION then press .
2. Press  *repeatedly* until the display shows PRINT INSTALL then press . Display shows PRINT INSTALL.
3. Press  to print. After printing out or selecting EXIT your BT PaperJet 30 returns to standby.

Print Set-up and Directory list

1. Press  *repeatedly* until the display shows FAX SET-UP then press .
2. Press  *repeatedly* until the display shows PRINT OUT SET-UP then press . Display shows PRINT SETTINGS.
3. Press  or  to scroll through the other options PRINT: ONE TOUCH, PRINT: SPEED DIAL and PRINT OUT: EXIT.
4. Press  to confirm the option displayed. After printing out your BT PaperJet 30 returns to standby.

SMS text printing

To print the SMS text configuration of your BT PaperJet 30, *see page 34*.

To print text messages, *see page 33*.

Caller Display

IMPORTANT

To use Caller Display you must first subscribe to the service from your network provider. A quarterly fee is payable.

For more information on BT's Calling Features, call BT free on **0800 800 150**.

Caller information not available.

With some incoming calls, the telephone number of the caller is not available and cannot therefore be displayed.

In this case your BT PaperJet 30 provides you with some explanatory information.

UNAVAILABLE

The number is unavailable.

WITHHELD

The caller has withheld their number.

RINGBACK

Ringback call.

OPERATOR

The call has been made via the operator.

PAYPHONE

The caller is ringing from a payphone.

INTERNAT

International call.

Caller Display

If you subscribe to a Caller Display service you can see the number of the person who is calling on the display screen.

Whether an incoming call is answered or not, the caller's details including the date and time of the call are stored in the Calls list.






Calls list

The Calls list contains information about your last 20 incoming callers.

If a call is received when the Calls list is full, the oldest entry will be replaced with the new call.

View and dial a number from the calls list

If sending a fax, insert the document in the feeder tray first.

1. Press . Display shows INCOMING CALLS.
2. Press  then scroll  or  through the list.
3. Press  to dial the displayed number. If making a phone call, lift the handset when prompted.

Copying

You can copy original documents inserting them **one page at a time** in the automatic feeder.

Make up to 9 copies of each page.

Copy a document

You can set the contrast and resolution as in fax documents.

Contrast: NORMAL
 LIGHT for dark originals
 DARK for light originals

Resolution: TEXT for normal typed documents
 PHOTO if the page contains pictures or fine detail.

1. Insert one page of the document in the automatic feeder with the text facing away from you. The display shows DOCUMENT READY.
2. Press . Display shows the settings for copy size, contrast and resolution, e.g. 100%, NORMAL and TEXT and the number of copies to be printed. If you are happy with the standard settings just select the numbers of copies you want on the keypad and press . If you want to change any of the settings follow steps 3 to 8.
3. Press to set the quality of copy. Press or to switch between the options HIGH QUAL for best reproduction or NORMAL for standard.
4. Press . The display shows ZOOM 100%. Press or to select the options: 140%, 70%, 50% or 100%.
5. Press . The display shows CONTRAST: Press or to select the option you want.
6. Press . Press to select the resolution option you want.
7. Select the number of copies you want .
8. Press to begin copying.

Pressing cancels copying at any time.

IMPORTANT

Do not insert into the document feeder:

- Pages smaller than A5.
- Newspaper pages (because of printer's ink).
- Pages with staples or paperclips, sticky tape or glue.
- Creased or torn pages.
- Wet paper or paper with wet correction fluid.
- Glossy or laminated paper.
- Paper thicker than 110g/m² or thinner than 70g/m².

Deteriorating print quality?

If the print quality deteriorates, set your BT PaperJet 30 to clean the print head and nozzles and print a test page, *see page 46*.

SMS

SMS stands for Short Messaging Service

IMPORTANT

You must subscribe to your Network Provider's Caller Display Service so that you can use SMS text messaging. A quarterly fee may be payable, please contact your network provider for more details. When you are using SMS text messaging you must not withhold your telephone number or the service will not allow you to connect. BT have prefixed the Service Centre number with '1470', this will release your telephone number only to the SMS Provider, even if you normally have your number withheld.

You must have your network's Caller Display service activated on your line. To send an SMS message, you must have the call number of an SMS message provider entered in your BT PaperJet 30. Some other network provider lines may not be compatible with this SMS service. If your BT PaperJet 30 is connected to a switchboard, you may not be able to use text message services.

You will not be able to receive text messages until you have first sent a message. The first sent message registers you with the text service.

Voice text

Please note that the conversion can translate common abbreviations and smileys etc., but to ensure maximum clarity of message delivery, abbreviations etc. should be used sparingly.

Some other network provider lines may not be compatible with this SMS service.

SMS text messaging service

Welcome to the SMS Text Messaging service on your BT PaperJet 30. The SMS Service is provided by BT.

Your BT PaperJet 30 can send and receive messages to and from any mobile phone (from participating mobile networks) and compatible landline telephones in the UK.

You may also send messages to landline phones that are NOT SMS compatible. Messages to non-compatible lines will be connected to voice text and delivered in spoken words to the telephone as a call.

The fixed line SMS is provided under BT's terms and conditions for telephone service. These can be found by visiting the BT.com website at: <http://www.bt.com/terms/tor.htm>

Register for the SMS text messaging service

When you send your first SMS text message from your BT PaperJet 30 you will automatically be registered for the service.

On receipt of your first SMS through the service, the system will send you a welcome SMS message back.

You may also register by sending the word REGISTER to 00000 upon which you will receive a confirmation message.

Cost of the fixed line service

There is no subscription charge (other than the subscription to Caller Display). Visit the BT.com website (www.bt.com) to find out how much it costs to send a text message (depends on your call package).

Your BT PaperJet 30 lets you send and receive SMS text messages of up to 160 characters using the alpha-numeric keypad.

SMS Service centre numbers

Your BT PaperJet 30 is preset to send and receive text messages using the BT service. If you want to use a different service you will need to change the service centre numbers.

- 1. Press **S** then **▲** or **▼** to scroll to CONFIGURATION.
- 2. Press **☞** to display SERV. CENTRE NO.
- 3. Press **☞** to display TX SERV. CENTRE 1470P1709400.

You can delete this number using the **☒** button to enter a different one.

- 4. Press **☞**. Display shows RX SERV. CENTRE 080058752.

You can delete this number using the **☒** button to enter a different one.

- 5. Press **☞**.
- 6. Press **☑** to return to standby.

Sending texts

- 1. Press **S** to display SMS SEND then **☞** to display SMS TEXT.
- 2. Use the keypad to write your text message.
- 3. When you have finished, press **☞**. Display shows TYPE NUMBER and NUM/TOUCH/SPEED.
- 4. Enter the number you want to send to and press **☞**.
- 5. Display shows TERMINAL NO.:YES.

Unless you have been asked by your recipient to add a sub-address press **☞** again to display SEND: YES. Press **☞** again to send the text.

If the person you are sending to has asked you to send to a specific subaddress then use **▶** or **▶** to display YES and press start to display RECIPIENT TERM.NO.: 9. You can now change the default subaddress (9) to the required number and press **☞** to display SEND: YES. Now press **☞** to send.

Character map

Button	Character
1	@ space 1 . / -
2	a b c ä å æ à ç 2 Γ
3	d e f è É é 3 Δ Φ
4	g h i 4
5	j k l 5 Λ
6	m n o ñ ö Ø ò 6
7	p q r s β 7 Π Σ
8	t u v ü ù 8
9	w x y z 9
0	space + & / 0 € £ ¥ \$ % & i ÷ Ξ Ψ Ω

Writing tips

Press **F** to switch between upper and lower case letters.

Press **◀** or **▶** to move the cursor to the point you want or create a space.

Press **⌫** to delete a character to the left of the cursor.

The top left of the display shows you the number of characters remaining, starting at 160 and counting down to 0.

If you save a copy of your text message it will be stored in the SMS SENT folder so you can send it to another recipient or change it.

If you press **⏻** after writing a text or no button is pressed for 2 minutes, your text is automatically saved in the SMS WRITTEN folder.

SENT SMS memory full

When the memory is full, the display shows **MEMORY FULL DELETE SENT SMS**. You will not be able to write any more texts. Delete one or more messages from the memory, *see page 32*.

Power failure

If your BT PaperJet 30 is without power for over one hour, all saved/stored text messages will be lost. This will be listed in the power failure report printed when the power is restored.

WRITTEN SMS memory full

When the memory is full, the display shows **MEMORY FULL DELETE WRITTEN SMS**. You will not be able to write any more texts. Delete one or more messages from the memory, *see page 32*.

If **MEM ALMOST FULL DELETE REC. SMS** is displayed you have reached 28 messages out of 30 max. It is advisable to read and delete messages. *See Delete texts page 33*.

If **MEM FULL. DELETE REC. SMS** appears the memory is full and you will not be able to receive any more text messages until you have deleted texts from the memory. *See Delete texts page 33*.

- During sending, your BT PaperJet 30 displays **TRANSMITTING**, then **TX COMPLETED** if successful or **TX ERROR** if unsuccessful.
- After sending, the display gives you the option to save the text - **SAVE SMS**: Press **◀** or **▶** to switch between **YES** or **NO**. Press **⏻** to confirm.



Save texts

You can write a text and save it to send later.


- Press **S** then **▲** or **▼** to scroll to **WRITE SMS**.
- Press **⏻** and use the keypad to write your text message.
- When you have finished, press **⏻**. Display shows **SAVED**. Your text will be saved in the SMS WRITTEN folder.

Receiving texts

Your BT PaperJet 30 can store up to 30 texts in the reception memory.



When you receive a text message, the  icon on the display flashes and shows **SMS RECEPTION**. The  indicator light also flashes. You can also set your BT PaperJet 30 to give an audible alert, *see page 32*.

Reading texts



When the  icon appears on the display and the message LED is flashing, you have received one or more text messages.

- Press **S** to display **SMS RECEIVED**. The number of texts is also displayed (max. 30).
- Press **⏻** to display **DISPLAY LIST**.
- Press **⏻**. The display starts with the newest text first and shows the reference number and the sender's number.

Either









Press  or  once to scroll through the message and see all the data.

Or

Press  or  to scroll through the list of texts.

Options while reading texts:

When you are reading a text you can scroll through a number of options:



- Press  to display options for the message.
- Press  or  to scroll through the options:
 - DELETE – press  to delete the messages.
 - ANSWER – press  to answer a message.
 - EDIT and SEND – press  to edit and/or forward the message.
 - PRINT – press  to print information about the text.
 - TEL CALL – press  to make a telephone call to the sender.

To print all texts, *see page 33*.

4. Press  to return to standby.





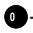




Set subaddress

If you have another telephone which can receive text messages connected to the same line, you can set the subaddress on your BT PaperJet 30 so that it can receive messages separately from the other phone.

A subaddress is an additional number - which is added to your telephone number when sending a text.












1. Press  then  or  to scroll to CONFIGURATION.

9 is the default subaddress used by the BT text service. Any texts sent to you without the subaddress specified will go to subaddress 9.

2. Press  to display SERV.CENTRE NO.
3. Press  or  to display TERMINAL NO.
4. Press . The display shows TERMINAL NO. <0-9> 9.
5. Enter a one digit number -, different to the subaddress used by your other phone (which probably use 9)  so that your BT PaperJet 30 can receive messages sent to it.
6. Press  to confirm.
7. Press  to return to standby.
8. When you change the subaddress of your BT PaperJet 30 you should send a text to register the address with the BT text system.

Audible alert

Set your BT PaperJet 30 to give an audible alert whenever it receives at text message. You can switch the audible alert on or off.

1. Press  then  or  to scroll to CONFIGURATION.
2. Press  to display SERV.CENTRE NO.
3. Press  or  to display SMS RX ADVICE.
4. Press  to display SMS RX ADVICE N.
5. Press  or  to switch between options N = no, Y = yes.
6. Press  to confirm the option displayed.
7. Press  to return to standby.

Message folders

The Sent and Written Message folders can each hold up to 5 texts.



The Received Message folder can hold up to 30 texts.

When they are full, you must delete texts before sending new ones.

Delete, edit, forward and print texts

You can view messages in the SENT, WRITTEN and RECEIVED folders and then delete or edit and forward them.



1. Press  then  or  to scroll to SMS SENT XX or WRITTEN or RECEIVED.

2. Press  to display DISPLAY LIST.
3. Press  The display shows the reference number, and the sender's number.

Either









Press  or  once to scroll through the message and see all the data.

Or

Press  or  to scroll through the list of texts.


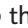





Options while reading texts:

When you are reading a text you can scroll through a number of options:

- Press  to display options for the message.
- Press  or  to scroll through the options:
 - DELETE – press  to delete the messages.
 - ANSWER – press  to answer a message.
 - SEND – press  to forward the message
 - EDIT – press  to change the message then send it
 - PRINT – press  to print the texts.

4. Press  to return to standby.

Print a list of texts

1. Press  then  or  to scroll to SMS SENT XX or WRITTEN or RECEIVED.
2. Press  to display DISPLAY LIST.
3. Press  or  to scroll to PRINT LIST.
4. Press  to print details of all messages in the folder selected.
After printing, your machine returns to standby.

If there are no messages in the folder you select, the display shows MEMORY EMPTY.

Print text configuration

You can print details of your BT PaperJet 30's text settings.

1. Press **S** then **▲** or **▼** to scroll to CONFIGURATION.
2. Press **⏏** to display SERV.CENTRE NO.
3. Press **▲** or **▼** to display PRINT CONFIG.
4. Press **⏏**. After printing, your machine returns to standby.

Additional settings

Change date and time

You can adjust the date and time manually.

1. Press **F** until the display shows FAX SET-UP then press **⏏**.
2. Display shows DATE AND TIME.
3. Press **⏏** to display FORMAT: DD/MM/YY. To select a different format press **◀** or **▶** to scroll through the options.
4. Press **⏏**. Display shows 24H. To switch to the 12 hour format, press **◀** or **▶**.
5. Press **⏏**. Display shows DD/MM/YY HH:MM.
25.03.04 1:23
6. Use the keypad to enter the correct date and time, e.g. **1 1 0 1 0 5** **0 9 3 0** for 11 January 05, 9.30am. As each digit is entered, the cursor moves to the next space. You can use the **◀** or **▶** buttons to move the cursor to make corrections.

If you have selected 12 hour format an **a** or **p** will appear between the date and time to indicate morning or afternoon. If you want to change the **a** or **p** place the cursor under it and press the **F** button to change it.

Position of your fax header.

Your BT PaperJet 30 is designed to send the fax header inside the text area of a document received by other machines. If the information at the top of a document received by another fax (i.e. your name, fax number, date and time), is:





– not printed fully at the top of the page

or

– too low down the page











you can adjust the position on your BT PaperJet 30.

1. Press **F** until the display shows FAX SET-UP then press **⏏**.
2. Press **F** repeatedly until the display shows VARIOUS SETTINGS.

- 3. Press  repeatedly until the display shows HEADER INSIDE. If required, press  or  to display HEADER OUTSIDE.
- 4. Press  to confirm the option displayed.







Set language & country

You can choose which language your machine uses for the display and set the country you are in.

- 1. Press  then .
- 2. Press  or  to scroll through the language options. Press  to select the language displayed.
- 3. Display shows CHOOSE COUNTRY. Press .
- 4. Press  or  to scroll through the country options. Press  to select the country displayed.
- 5. Press  to return to standby.





Country	Language to be selected
UK	ENGLISH
France	FRANCAIS
Germany	DEUTSCH
Italy	ITALIANO
Portugal	PORTUGUES
Spain	ESPANOL
Sweden	SVENSKA
Denmark	DANSK
Holland	NEDERLANDS

Adjust print area of received documents

1. Press **F** *repeatedly* until the display shows FAX SET-UP then press .
2. Press **F** *repeatedly* until the display shows PRINTER PARAMET. Press  *repeatedly* until the display shows REDUCTION: 94%.
3. Press  or  to scroll through the other options 80%, 76%, 70% and OFF.
4. Press  to confirm the option displayed.
5. Press  to return to standby.



Received fax size

To make sure that received documents which are longer than A4 size are printed, you can set your machine to print the extra text on another sheet.

1. Press **F** *repeatedly* until the display shows FAX SET-UP then press .
2. Press **F** *repeatedly* until the display shows PRINTER PARAMET. Press  *repeatedly* until the display shows SURPLUS:AUTO.
3. Press  or  to scroll through the options:

SURPLUS:ON – your machine will always print surplus text on another sheet.

SURPLUS:OFF – surplus text will not be printed.







SURPLUS AUTO – surplus text will be printed on another sheet providing the surplus exceeds 12mm.
4. Press  to confirm the option displayed.
5. Press  to return to standby.

Silent reception

If your machine is set to AUTOMATIC or PHONE/FAX reception modes (*page 39*) you can set it to receive documents without the ringer sounding.






In AUTOMATIC mode, your machine will never ring when an incoming call is received.

In PHONE/FAX mode, the ringer does not sound but if you receive a voice call, you will hear the voice call alert.

1. Press **F** *repeatedly* to display INSTALLATION then press .
2. Press **F** to display ENHANCED FEATUR. Press  until display shows SILENT RX: NEVER.
3. Press  or  to scroll through the options:
 SILENT RX: NEVER – the ringer is always on.
 SILENT RX: ALWAYS – the ringer is switched off.
 SILENT RX: DAILY – the ringer is off for the next 24 hours.
4. Press  to confirm the option displayed.
5. Press  to return to standby.







Number of rings before answer

If your machine is set to AUTOMATIC or PHONE/FAX reception mode, it will answer calls after 4 rings. You can change this to 1-8 rings.

1. Press **F** *repeatedly* until the display shows INSTALLATION.
2. Press  *repeatedly* until the display shows RING COUNT:04.
3. Press  or  to scroll through the options: 01-08.
4. Press  to confirm the option displayed.
5. Press  to return to standby.

Ringer volume







There are 3 levels and Off.

1. Press **F** *repeatedly* until the display shows FAX SET-UP then press .
2. Press **F** to display VARIOUS SETTINGS.
3. Press  *repeatedly* until the display shows RING VOLUME: HIGH.
4. Press  or  to scroll through the options: RING VOLUME: MED, RING VOLUME: LOW and RING VOLUME: OFF.
5. Press  to confirm the option displayed.
6. Press  to return to standby.

Distinctive ring

If your network offers the possibility of having two or more numbers on the same telephone line, each number will have a different ring pattern. When you use the distinctive ring feature for the first time, your BT PaperJet 30 will “learn” one of the patterns and will then react differently to calls with that ring pattern.

When distinctive ringing is set to On, you can set your machine to PHONE/FAX reception mode only. When you receive a call with the ring pattern that your BT PaperJet 30 has learnt, it will always answer in fax receive mode. If you receive calls with other ring patterns, your machine will not auto answer in PHONE/FAX mode but ring normally.

1. Press **F** *repeatedly* until the display shows INSTALLATION then press .
2. Press **F** *repeatedly* until the display shows ENHANCED FEATUR.
3. Press  *repeatedly* until the display shows DISTINCT. RING:OFF.
4. Press  or  to scroll to CHANGE PATTERN.
5. Press . The display shows AUTODETECT.RING.
6. Ring your BT PaperJet 30 on the new number. When the display shows RING DETECTED. Press  to return to standby.

Voice call alert

If your BT PaperJet 30 is set to PHONE/FAX reception, it will automatically alert you to voice calls with a 20 second tone. You can change the duration of the tone, from 15 to 40 seconds.

1. Press **F** *repeatedly* until the display shows INSTALLATION.
2. Press **⏮** *repeatedly* until the display shows FAX/TEL TIMER:20.
3. Press **⏮** or **⏭** to scroll through the options: 15, 20, 30 or 40.
4. Press **⏮** to confirm the option displayed.
5. Press **⏮** to return to standby.

If connected to a switchboard, *see page 61*.

Remote start code

If you answer a call on an extension phone, before BT PaperJet 30 has automatically answered, and then find it is a fax call, you can transfer the call to the BT PaperJet 30 by pressing ***5** on the keypad of your phone.



You can change the 5 to another number 0-9 or * if required. You can also switch remote start off.

1. Press **F** *repeatedly* until the display shows INSTALLATION then press **⏮** to display TEL. LINE SET-UP.
2. Press **⏮** again. The display shows PUBL.LINE(PSTN).
3. Press **⏮** *repeatedly* until the display shows REMOTE START:ON.
4. To switch the code off, press **⏮** or **⏭** to scroll to OFF and press **⏮** to confirm.

Or









To change the code press **⏮**. The display shows TYPE CODE above the current code.

5. Enter the new code **0-9** or *****.

6. Press  to confirm the option displayed.
7. Press  to return to standby.







Resending of documents in memory

If a document stored in memory fails to be sent (for example, the number was engaged), your BT PaperJet 30 will automatically retry up to 3 times at 2 minute intervals. If after all retries the fax has not been sent, the document will normally be deleted from memory. You have the option of retaining failed faxes in memory to enable you to try sending them again without re-scanning. To do this you must enable the document re-transmission feature.

1. Press  *repeatedly* until the display shows FAX SET-UP then press .
2. Press  to display VARIOUS SETTINGS.
3. Press  *repeatedly* until the display shows RETRANS DOC:OFF.
4. Press  or  to switch between OFF and ON.
5. Press  to confirm the option displayed.
6. Press  to return to standby.



Dial and fax tones on/off

Your BT PaperJet 30 lets you hear the dial tones as well as the fax tones when connecting to another fax machine. You can turn the sound On or Off.

1. Press  *repeatedly* until the display shows INSTALLATION then press  to scroll to LINE MONITOR:OFF.
2. Press  or  to switch between OFF and ON.
3. Press  to confirm the option displayed.
4. Press  to return to standby.









Dial and fax tones volume

You can adjust the volume for the line tones you hear when dialling and connecting to another fax machine.

1. Press  you hear the dial tone.
2. Press  to adjust the volume which is displayed on the screen.









Beeps on/off

Your BT PaperJet 30 gives beeps to alert you to faults, errors etc. You can switch these beeps to High, Med, Low or Off.

1. Press  repeatedly until the display shows FAX SET-UP then press .
2. Press  to display VARIOUS SETTINGS.
3. Press  repeatedly until the display shows BUZZER VOL:LOW.
4. Press  or  to switch between HIGH, MED, LOW and OFF.
5. Press  to confirm the option displayed.
6. Press  to return to standby.

Transmission speed







Your BT PaperJet 30 is set to send faxes at 9600bps (9.6). If you consistently fail to send faxes to a particular number it may help to reduce the transmission speed to 4800bps (4.8).

1. Press  repeatedly until the display shows FAX SET-UP then press .
2. Press  to display VARIOUS SETTINGS.
3. Press  repeatedly until the display shows TX SPEED 9.6.
4. Press  or  to switch between 4.8 and 9.6.
5. Press  to confirm the option displayed.
6. Press  to return to standby.

Error Correction Mode (ECM)

ECM is a standard system for correcting errors caused by interference on the line. It works when your machine and the sending or receiving machine both have ECM switched on. When this is the case E is displayed during transmission.

The default setting for ECM on your BT PaperJet 30 is On. You can switch the setting On or Off.

1. Press **F** *repeatedly* until the display shows FAX SET-UP then press .
2. Press **F** to display VARIOUS SETTINGS.
3. Press  *repeatedly* until the display shows ECM:ON.
4. Press  or  to switch between ON and OFF.
5. Press  to confirm the option displayed.
6. Press  to return to standby.


Install a new print cartridge

Print cartridge type


When replacing a print cartridge you will need type M2201, available from 0870 240 7285.

Replace print cartridge


1. Remove the handset from its cradle.

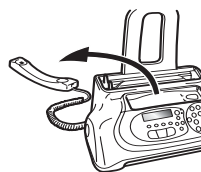


2. Open the front cover.

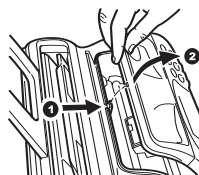


3. Pull the print cartridge lever forward then lift the cartridge out.

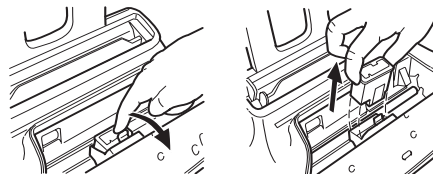


4. Take the new print cartridge from its packaging and peel the film covering the nozzles.

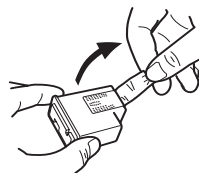


5. Avoid touching the electrical contacts and nozzles.

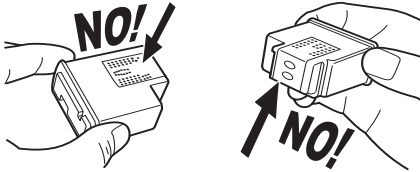

6. Insert the new print cartridge with the electrical contacts facing towards the front of the machine.

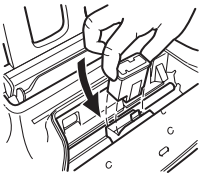

7. Push the print head forward until it clicks into place.

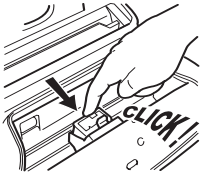

8. Close the cover and replace the handset.
9. When you have installed a new cartridge to replace one that has run out of ink, your BT PaperJet 30 will automatically recognise a new cartridge and the display shows NEW PRINT HEAD? 1 = YES, 0 = NO. Press 1.

A test page will be printed. Examine the test page. Check that the numbered scale is not broken at any point and that there are no horizontal white lines within the black areas.

If everything seems OK, press **1**. If there is a problem, press **0** to repeat the process.

Clean print cartridge head and test the nozzles

If the print quality deteriorates, set your BT PaperJet 30 to clean the print head and nozzles and print a test page.

1. Press **F** repeatedly until the display shows HEAD MAINTENANCE. Press **⏏**.
2. Display shows NEW HEAD:ON. Press **◀** or **▶** to switch to NEW HEAD:OFF. Press **⏏**.
3. Display shows CLEANING:ON. Press **⏏**.

Your BT PaperJet 30 cleans the print head and the test page will be printed.


Examine the test page. Check that the numbered scale is not broken at any point and that there are no horizontal white lines within the black areas.

If you are not satisfied with the test page, repeat the process.


Press **⏏** to cancel the test procedure at any time.

Clean print cartridge's electrical contacts


1. Remove the handset from its cradle.

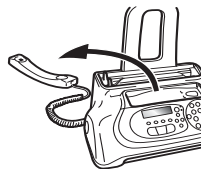


2. Open the front cover and wait for cartridge to stop moving.

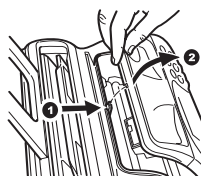


3. Disconnect your BT PaperJet 30 from the mains power.

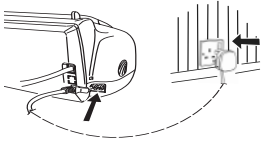

4. Pull the print cartridge lever forward then lift the cartridge out.

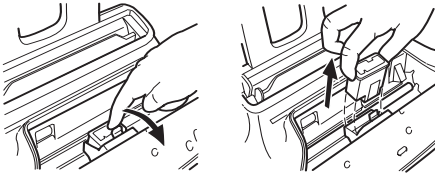


5. Clean the electrical contacts inside the cartridge compartment using a slightly damp cloth.

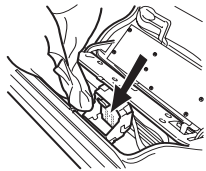


DO NOT TOUCH THE NOZZLES.

6. Now clean the electrical contacts on the cartridge with a slightly damp cloth.

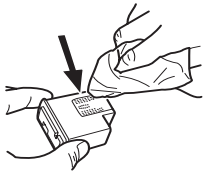

7. Replace the print cartridge and push until it clicks into place.

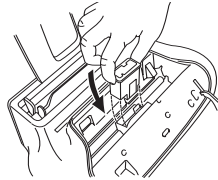

8. Close cover and replace the handset. Reconnect the mains power. You will need to reset the date and time.

Help

If the power fails

One-touch and speed dial directories are saved.

Documents stored in the memory as well as the date and time are not saved.

Printing stops before the job is finished

Check that the paper is not jammed.

Check that the front cover is fully closed.

Have you run out of paper? If receiving a fax, your machine can store up to 19 pages in its memory for printing later.

Cannot send a fax

There may be interference on the line.

Try sending the fax at a slower speed, *see page 42*.

There may have been an error or a problem with the receiving machine. Check the display for an error message.
See Error Messages, page 43.

Reception in memory

If you place a document to be faxed or copied in the automatic feeder while receiving a document, printing of the received document stops and it will be stored in the memory for printing later. During reception the display shows RX IN MEMORY.

Remove the document from the feeder to print the fax in memory.

Machine does not come on

Check that you have plugged it into the mains and that the power is switched on.

Document does not load


Check that it is an acceptable size and type of paper, *see page 17*.

Machine will not send a document

Check that the document is not jammed.

The line may be busy. Wait until it is free and try sending again.

Machine will not receive a document

Check the reception mode. If it is set for manual reception you must lift the handset and press  to begin reception, *see page 20*.

Cannot copy a document

Check that the document is not jammed.

Remember when copying, you can only feed one sheet of paper at a time into the automatic feeder, *see page 27*.

You may be using an unsuitable kind of paper, *see page 17*.

Blank sheets are printed when copying

You may be copying the blank side of the page. Feed in pages with the side to be copied facing away from you.

Error code is listed in a report

If there has been a specific problem sending or receiving a fax you may see an error code listed in the transmission or activity report. To check what has caused the problem, *see Error Codes below, page 51*.

Cannot fix a recurring problem

Try unplugging your machine from the mains power, wait at least 10 seconds, then switch the power back on again.

If the fault continues, call the Helpline **0870 240 8026**.

Error Codes

Code	Problem	Solution
OK	None	Fax successful
<OK>	Poor print quality.	Check with sender about quality of original.
02	Could not connect to line.	Check that your machine is plugged into the telephone network. Check the handset is on the hook.
03	No answer from other machine or person.	Check the number dialled is correct.
04	Error has occurred when re-sending a fax. nn = the number of the page on which the error occurred.	Resend from the page indicated.
05	Resend pages nn – nn. (nn = the number of the page on which the error occurred.	Resend from the page indicated.
07	Document too long.	Split the document to be sent into small sets of pages.
08	Scanner cannot read the document.	Remove the document from the automatic feed and reinsert it when it tries to connect.
09	STOP pressed.	
10	Problem during reception.	Ask your sender to send the document again.
11	Printing error during reception. Document stored in memory but the memory was filled before completion.	Correct the printing fault (e.g. out of ink) and wait for the document in the memory to be printed. Contact sender for the rest of the document.
13	Problem with polling.	Call the sender and check their machine has been set up correctly for polling.
16	Power failure on page nn.	The power failed when sending or receiving a fax. Resume transmission from the page indicated.
0CC	Line busy.	Try again later.

Signals and On screen messages

Your BT PaperJet 30 provides audible alerts or messages on the display to inform you of the status of the machine and for error messages. In some cases the error indicator light will also flash.





Audible alerts






Short tone – you have pressed the incorrect button when using the menu.

Long tone – fax has not been sent or received correctly.

Continuous tone – you must hang up the line.

Note: To turn off the ERROR LIGHT, press .


Display error messages	
AUTOREDIAL NNN	Line busy, getting ready to redial the number.
CHECK DOCUMENT, PRESS (STOP)	Document not feeding in correctly. Take out and replace the document in the automatic feeder and press  to restore normal operation.
CHECK PAPER, PRESS (STOP)	Out of paper. Add more and press  . Paper not being fed in correctly. Replace the paper in the feeder then press  to restore normal operation.
CHECK PRINT HEAD	Print cartridge not detected or installed incorrectly. Install or re-install the print cartridge. Print nozzles need cleaning. See Clean print cartridge, <i>page 46</i> .
COPY INTERRUPTED	 has been pressed during copying. An error occurred during copying and it could not be printed.
COVER OPEN	Close the front cover.

DOC IN MEMORY	The document received is saved in the memory because an error occurred during reception – e.g. paper jam, ink out etc) - preventing it from being printed. Check and correct the problem.
MEMORY FULL	One or more documents in the memory have filled the available capacity. Check to see if there is fault with printing (e.g. paper out, paper jam etc) and correct it.
NOT PROGRAMMED	You selected a one-touch or speed dial code that has not been set.
OUT OF INK	Insert a new cartridge, <i>see page 44</i> .
PAPER ERROR. PRESS (STOP)	Paper jam during copying or receiving. Press  . If the sheet is not ejected automatically, remove it. <i>See Paper Jams, page 54</i> .
POLL. RETRY NNN	Polling reception connection not established. Your BT PaperJet is getting ready to redial.
REMOVE DOCUMENT, PRESS (STOP)	Paper jam during copying or sending. Press  . If the sheet is not ejected automatically, remove it. <i>See Paper Jams, page 54</i> . Scanning cancelled because  was pressed.
RX ERROR	Document not received correctly. Press  to switch the error indicator light off and acknowledge the message.
RX IN MEMORY	Received rest of fax into memory because an error occurred during sending, preventing it from being printed. The type of fault is displayed on the bottom line.
SYSTEM ERROR NN	A fatal error has occurred. Turn your machine off, wait for a few seconds, then turn it back on again. If the problem continues, call the BT PaperJet Helpline on 0870 240 8026 .
TX ERROR	Document not sent correctly. Press  to switch off the error indicator light and acknowledge the message. Send the fax again.

Paper jams


If sheets of plain paper get jammed, the display shows PAPER ERROR PRESS .

1. Press . If the jammed sheet does not eject automatically, carefully pull it out manually.

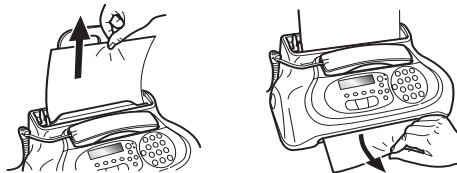


2. If the sheet is jammed inside the machine:


Turn off the mains power and take the handset off the cradle and open the front cover.

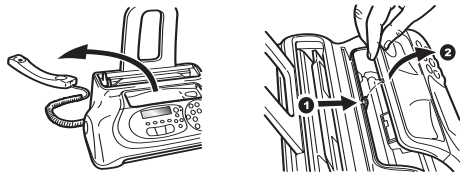


Move the print cartridge to the left hand side of the fax machine.

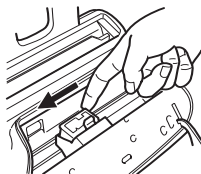

Release the paper feed roller by pulling the green lever forward as shown.

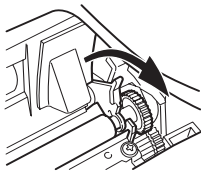


Remove the roller.

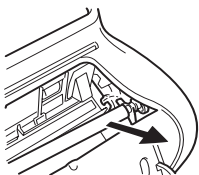


Remove the jammed paper.

Replace the roller by inserting one end into the locating hole on the left-hand side of the machine. Then with the lever pointing forward press the right hand end down into the slot on the right.

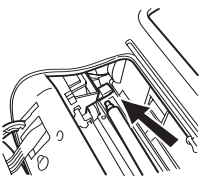

Push the lever back into the upright position so that the roller cog wheel is engaged.

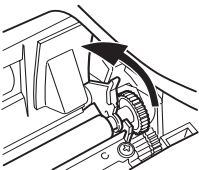


Close the cover and replace the handset. Reconnect the power and reset the date and time.

Cleaning the scanner

Dust on the glass surface of the scanner may cause problems when scanning documents. To check if the scanner is clean, make a copy of a blank piece of paper. If vertical lines appear on the copy, clean the scanner. If vertical lines still appear, call the BT PaperJet Helpline **0870 240 8026**.


1. Disconnect your BT PaperJet 30 from the mains power and remove the handset from its cradle.

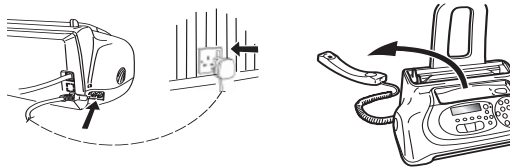


2. Turn off the mains power and open the front cover.




3. Move the print cartridge to the left hand side of the fax machine.

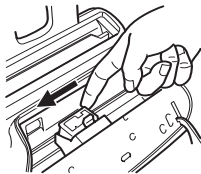


4. Release the paper feed roller by pulling the green lever forward as shown.

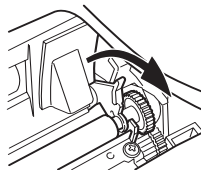

-
5. Remove the roller.

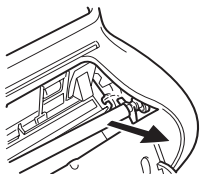


6. Clean the glass surface of the scanner with a soft, lint-free cloth.

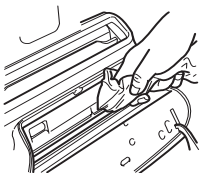


DO NOT POUR OR SPRAY CLEANING FLUID DIRECTLY ONTO THE GLASS SURFACE.

7. Replace the roller by inserting one end into the locating hole on the left-hand side of the machine. Then with the lever pointing forward press the right hand end down into the slot on the right.

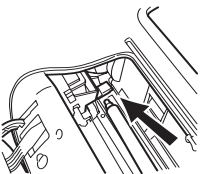

8. Push the lever back into the upright position so that the roller cog wheel is engaged.

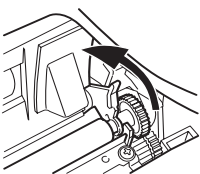

9. Close the cover and replace the handset. Reconnect the power and reset the date and time.

General information

Safety

General

Your BT PaperJet 30 should be placed on a level and stable surface at least 10cm away from other electrical equipment.

Do not place it in direct sunlight or near a radiator, heater or air conditioning unit. Do not allow it to become dusty or come into contact with water or chemicals.

Make sure air can circulate freely around your BT PaperJet 30. Do not cover or use in very enclosed spaces. Do not place your machine on soft surfaces such as beds, duvets, cushions, sofas or carpets as there is a risk of overheating.

Do not touch telephone wires or mains cables where the insulation is missing or damaged unless they have been disconnected.

Do not attempt any repairs. This could expose you to high voltages or other risks. Contact the helpline for all repairs.

Do not expose to rain or any other form of moisture. There is a risk of electric shock or fire. If any liquid is accidentally spilled into your machine, immediately remove the mains power plug and have the BT PaperJet 30 inspected professionally.

Do not submerge any part of the product in water and do not use in damp conditions, such as bathrooms.

There is a slight chance that your BT PaperJet 30 could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord for the duration of the storm.

Do not expose to fire, explosive or other hazardous conditions.

Cleaning

Unplug your BT PaperJet 30 from the mains and telephone line before cleaning. Do not use liquid or aerosol cleaning agents such as sprays or polishes as these will damage the product.

Cleaning the exterior

Simply clean the casing with a damp (not wet) cloth or anti-static wipe. Never use a dry cloth as this may cause a static shock.

Environmental

Do not expose to direct sunlight.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp conditions, such as bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

There is a slight chance that your machine could be damaged by an electrical storm. We recommend that you unplug the power a telephone line cord for the duration of the storm.

Guarantee

FOR ASSISTANCE CALL THE HELPLINE ON 0870 240 8026 quoting the model and serial number.

1. In the event that the Helpline is unable to resolve a problem over the phone, the following will apply:
 - I. The Helpline will require the customer to provide details of where the BT PaperJet 30 was purchased, date of purchase and method of payment.
 - II. If the fax was purchased within 28 days a brand new replacement BT PaperJet 30 will be despatched by courier to the customer.
 - III. If the product was purchased more than 28 days ago and within the guarantee period, a 'loan' BT PaperJet 30 will be despatched by courier to the customer.
2. If 1 (III) applies, the original fax will be repaired free of charge subject to the conditions in clause 5. BT's normal repair times for most faults is 14 days. If the fax is beyond economical repair we will replace it with a brand new BT PaperJet 30. On completion of repair the customer will be contacted and give the option of the return of the original repaired fax and free collection of the loan fax or at the customer's choice, retention of the loan fax.
3. A new or loan fax will be delivered by courier. If a Helpline call is received by 4pm we can arrange an overnight courier, but will agree a delivery time with the customer. On delivery of the new loan or repaired fax as appropriate, the customer must promptly replace it in the box with the faulty fax or loan fax to enable the courier to return the fax to BT.
4. If the customer decides to retain the loan fax, the balance of the original guarantee will transfer to this fax.

- 5. This guarantee does not cover the fair wear and tear or accidental damage or damage caused by improper installation. The guarantee will not apply if upon inspection it is established that unauthorised repairs or modifications have been made to the fax. In such circumstances the customer will be sent a condition report with a choice of either (a) paying the cost of repair of the faulty fax or (b) the carriage charges incurred in having the original fax returned un-repaired and the loan fax collected.
- 6. The liability of BT under the terms of the guarantee is limited to the exchange of the fax or the repair and return of the original fax.
- 7. Excluded from this guarantee are accessories, consumables (e.g. ink cartridges).
- 8. This guarantee applies to the original customer only and is not transferable.
- 9. This guarantee does not affect the customer’s statutory rights

For your records

Date of purchase:

Place of purchase:

Serial number:

For guarantee purposes proof of purchase is required so please keep your receipt.

Technical information

How many fax machines/telephones can you have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your BT PaperJet 30 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephone may not ring.


















With different fax/telephone types there is no guarantee of ringing, even when the REN is less than 4.

Switchboard compatibility

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards which support tone dialling and timed break recall. If in doubt please consult your service provider.

To set the switchboard dialling mode and access code

You must set your BT PaperJet 30 for connection to a switchboard.

1. Press **F** repeatedly until the display shows INSTALLATION then press .
2. Display shows TEL. LINE SET-UP. Press .
3. Press  or  to switch between PUBL.LINE (PSTN) and PRIV.LINE(PBX). Press . For use with a switchboard select PRIV.LINE(PBX).
4. Set Tone or Pulse dial mode for your switchboard. Press  or  to display TONE or PULSE. Press .
5. Press  or  to switch between EXT. LINE PREFIX or EXT. LINE FLASH. If your access code to get an outside line is Recall, choose FLASH. If your access code is a digit(s), choose PREFIX. Press  to confirm. If you choose PREFIX, you are asked for the code. Enter the code using the keypad and press .
6. Set dial mode for the network (in the UK the network dial mode must be set to Tone). Press . Press  or  to switch between PSTN DIAL:TONE and PSTN DIAL:PULSE.
7. Press  to confirm.
8. Press  to return to standby.

Important: If you set the output mode to Flash, you simply need to press the **R** button on your BT PaperJet 30 to get an outside line. You can then dial the number you want as normal. When you are using an outside line the display shows E for external call.

If you have problems connecting to a switchboard, contact the BT PaperJet Helpline on **0870 240 8026**.

R&TTE

This product is intended to be connected to analogue networks and private switching systems in the United Kingdom.

This product complies with the essential requirements of the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

A copy of the certificate can be obtained from the Helpline **0870 240 8026**.

**THE SLEREXE COMPANY LIMITED**

SAPORS LANE · BOOLE · DORSET · BH 25 8 ER

TELEPHONE BOOLE (945 13) 51617 · TELEX 123456

Our Ref. 350/PJC/EAC

4th April, 1984

Dr. P. N. Cundall,
Mining Surveys Ltd.,
Holroyd Road,
Reading,
Berks.

Dear Pete,

Permit me to introduce you to the facility of facsimile transmission.

In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

P. J. CROSS
Group Leader – Facsimile Research

Visit us at www.bt.com



Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2005.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
BT PaperJet 30 UG (02/05) Issue 2 Edition 2.1
Designed and produced by The Art & Design Partnership Ltd.
Printed in Thailand.
255993V

